

INSTALLATION GUIDE

SECORD 2.0-Tub Doors

General Information


Please check the condition & that all parts are included with your new shower doors. Any issues must be reported right away. Delaying this might affect the warranty of the item.

Warning: handle glass with care. It cannot be re-worked.


Aftercare: clean regularly with soap & water; especially in areas with hard water. Avoid contact with strong chemicals such as organic solvents or strippers.

Warning: two adults may be required to install shower doors.

Recommended Tools

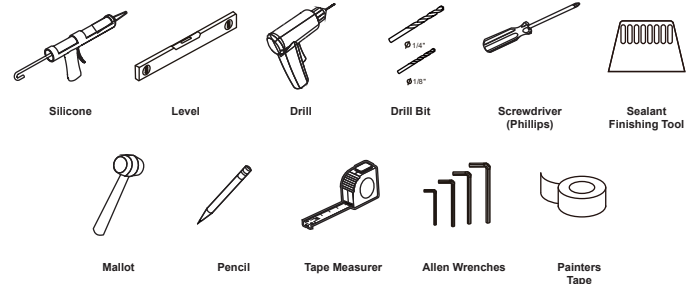

Assembly Drawing

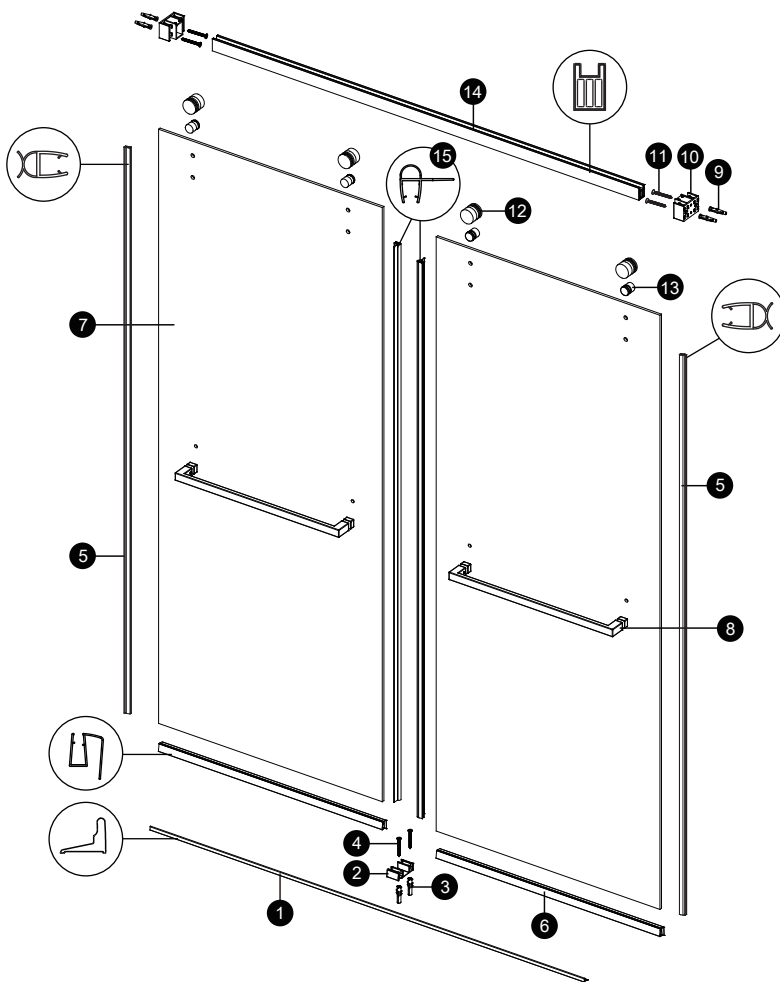


PART #	DESCRIPTION	Q'TY
1	Aluminum Threshold	1pc
2	Bottom Guide	1pc
3	Wall Plugs-A	2pcs
4	Screws ST4x1 3/8"	2pcs
5	Door bubble Gasket	2pcs
6	Bottom Door Gasket	2pcs
7	Door Panels	2pcs
8	Towel Bar	2pcs
9	Wall Plugs-B	4pcs
10	Wall Brackets	2pcs
11	Screws ST5x2"	4pcs
12	Rollers	4pcs
13	Anti-Lift Pins	4pcs
14	Rail	1pc
15	F waterproof Gasket	2pcs

Disclaimer: please hire a specialist if you feel you are unable to install yourself. Teago cannot be held liable for a faulty install or damage done by it.

INSTALLATION GUIDE

SECORD 2.0-Tub Doors




Install Steps (Page 1)

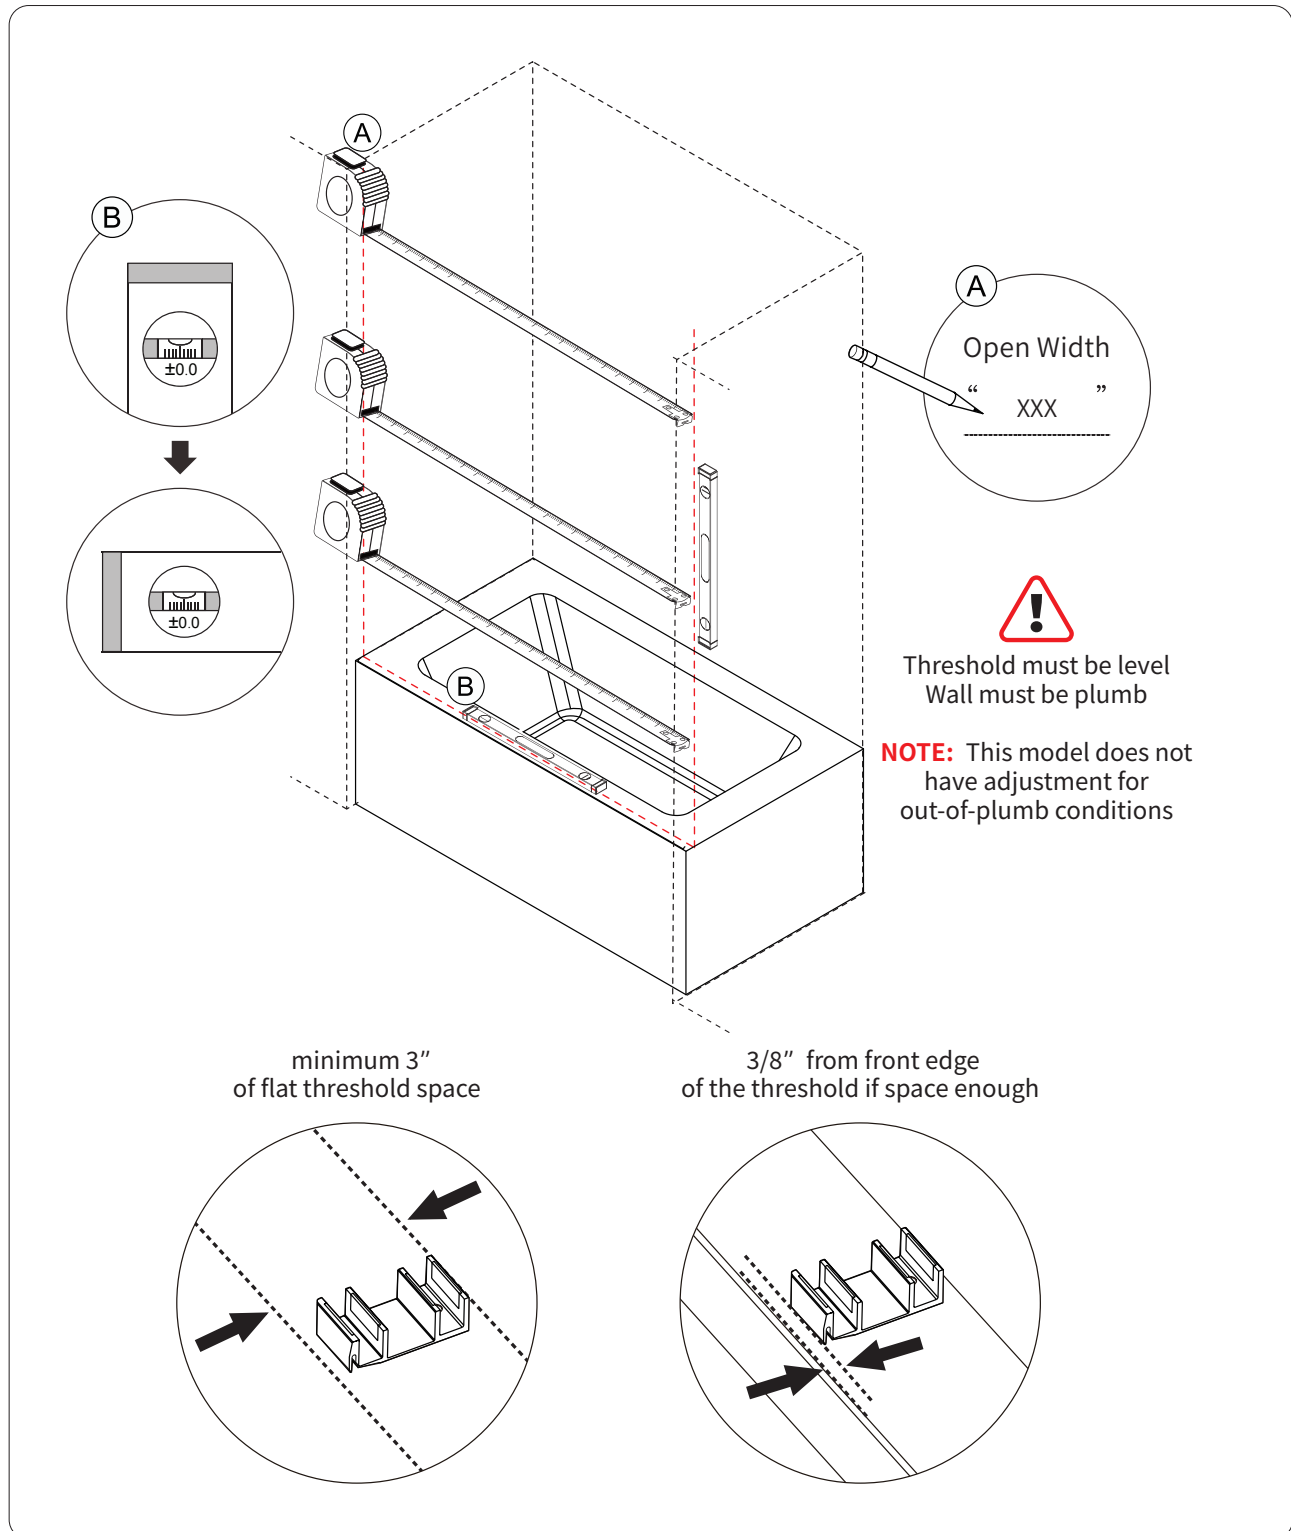

INSTALLATION GUIDE

SECORD 2.0-Tub Doors

Install Steps (Page 2)

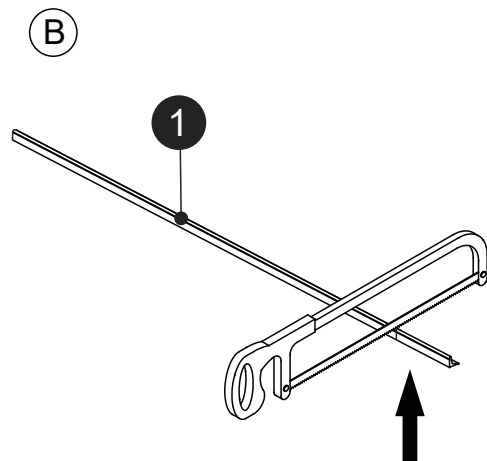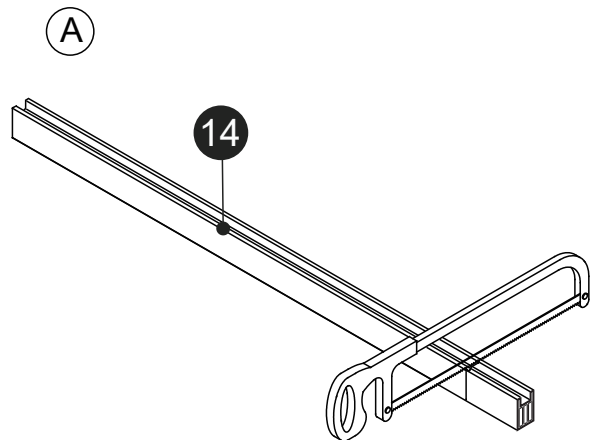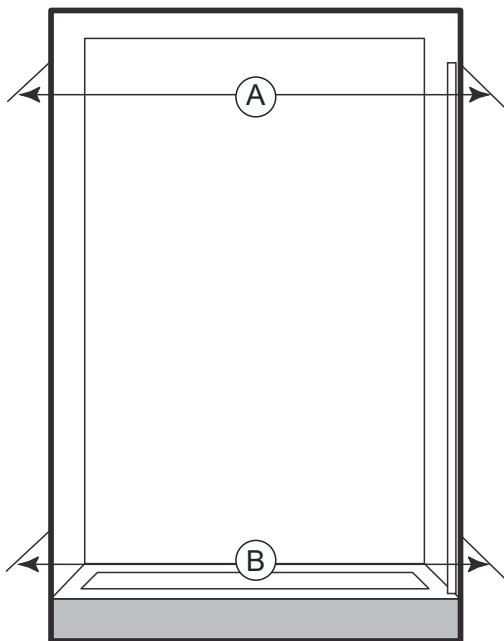


Measure the bottom threshold / top rail with a tape measure. Cut the length according to installer's recommendation.



INSTALLATION GUIDE

SECORD 2.0-Tub Doors

Install Steps (Page 3)

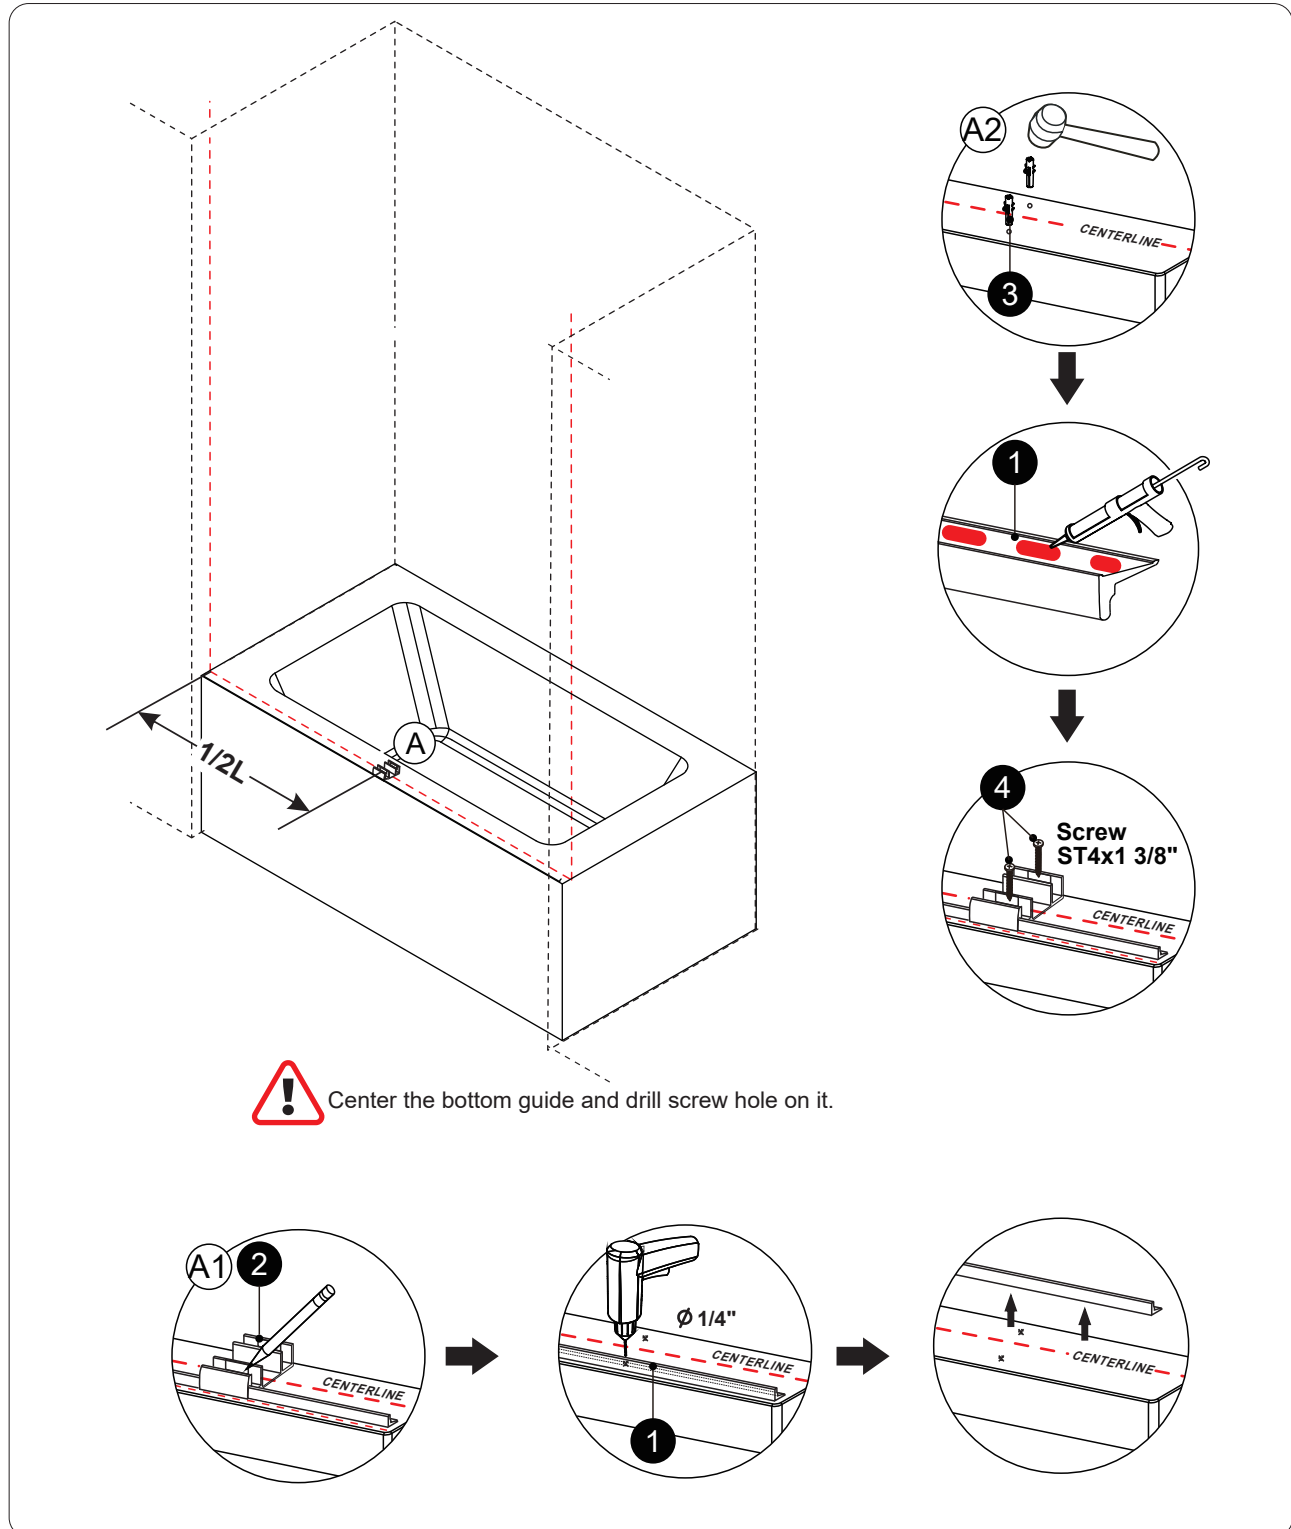




INSTALLATION GUIDE

SECORD 2.0-Tub Doors




Install Steps (Page 4)

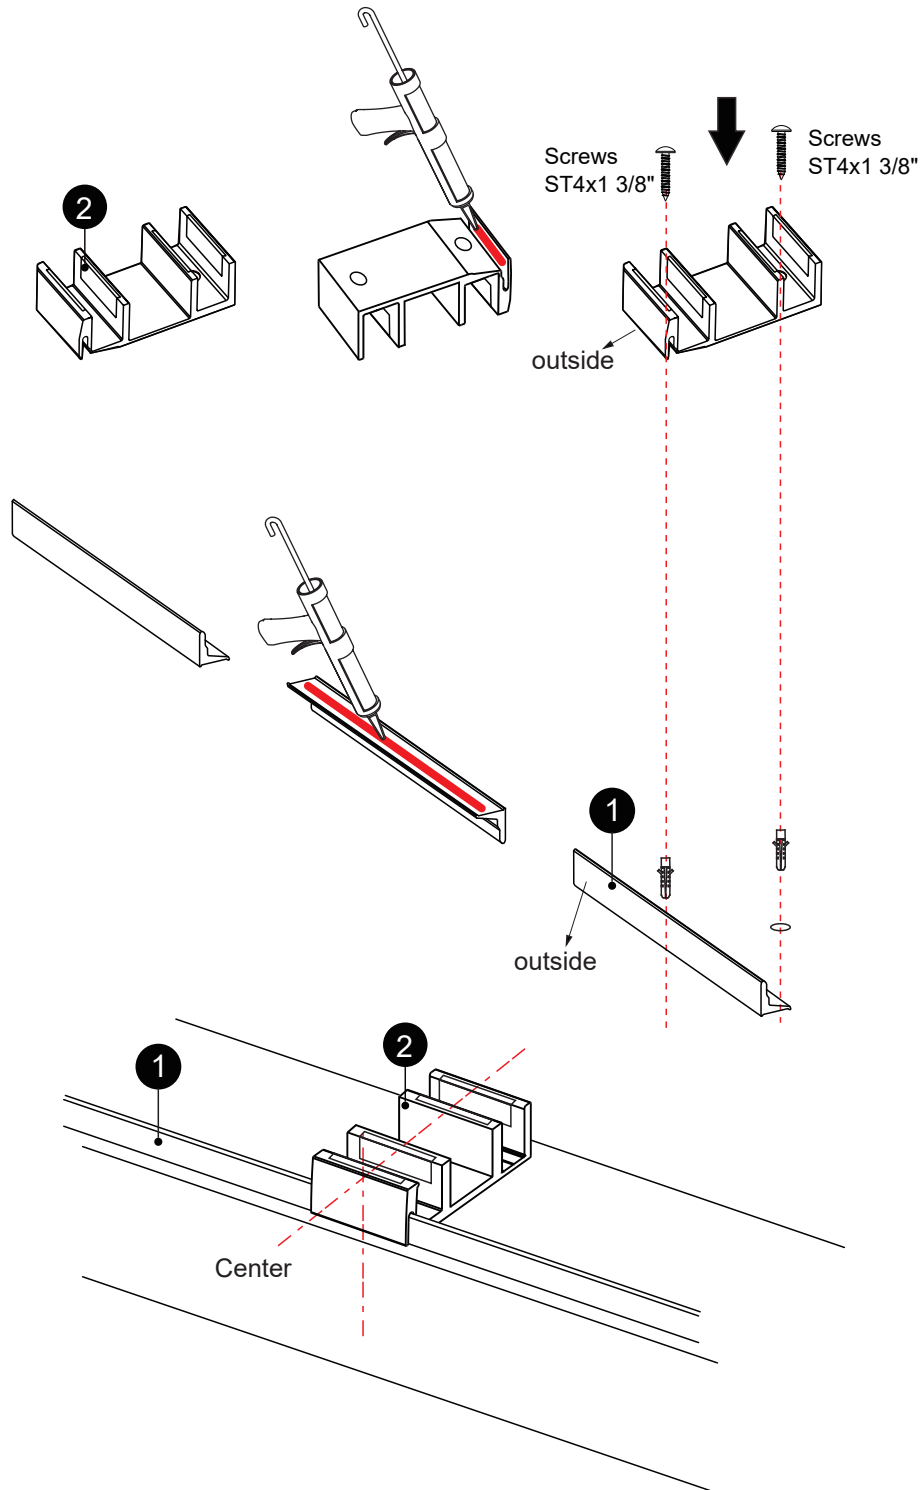

INSTALLATION GUIDE

SECORD 2.0-Tub Doors


Install Steps (Page 5)

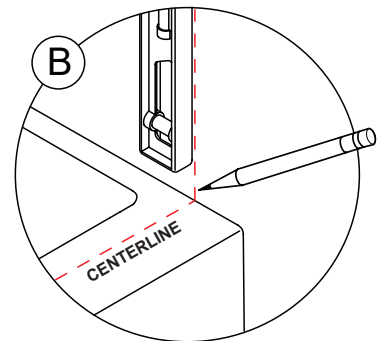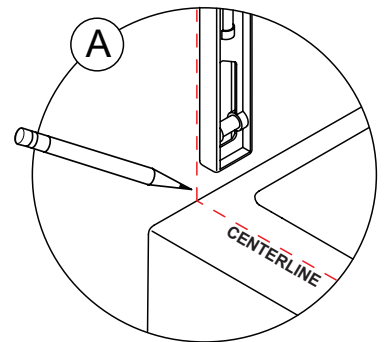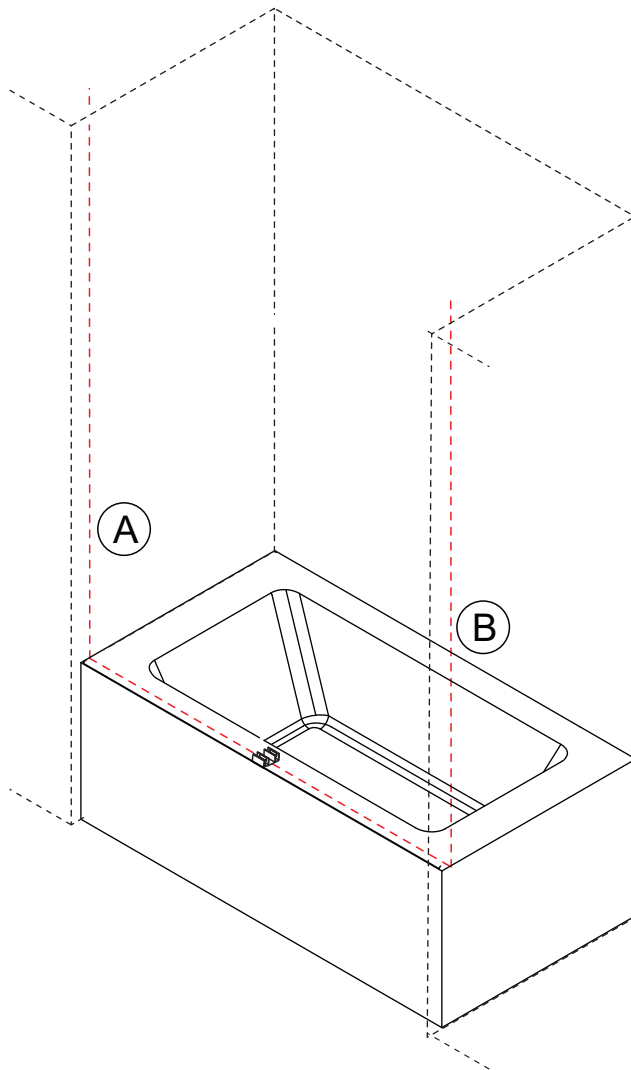

INSTALLATION GUIDE

SECORD 2.0-Tub Doors

Install Steps (Page 6)

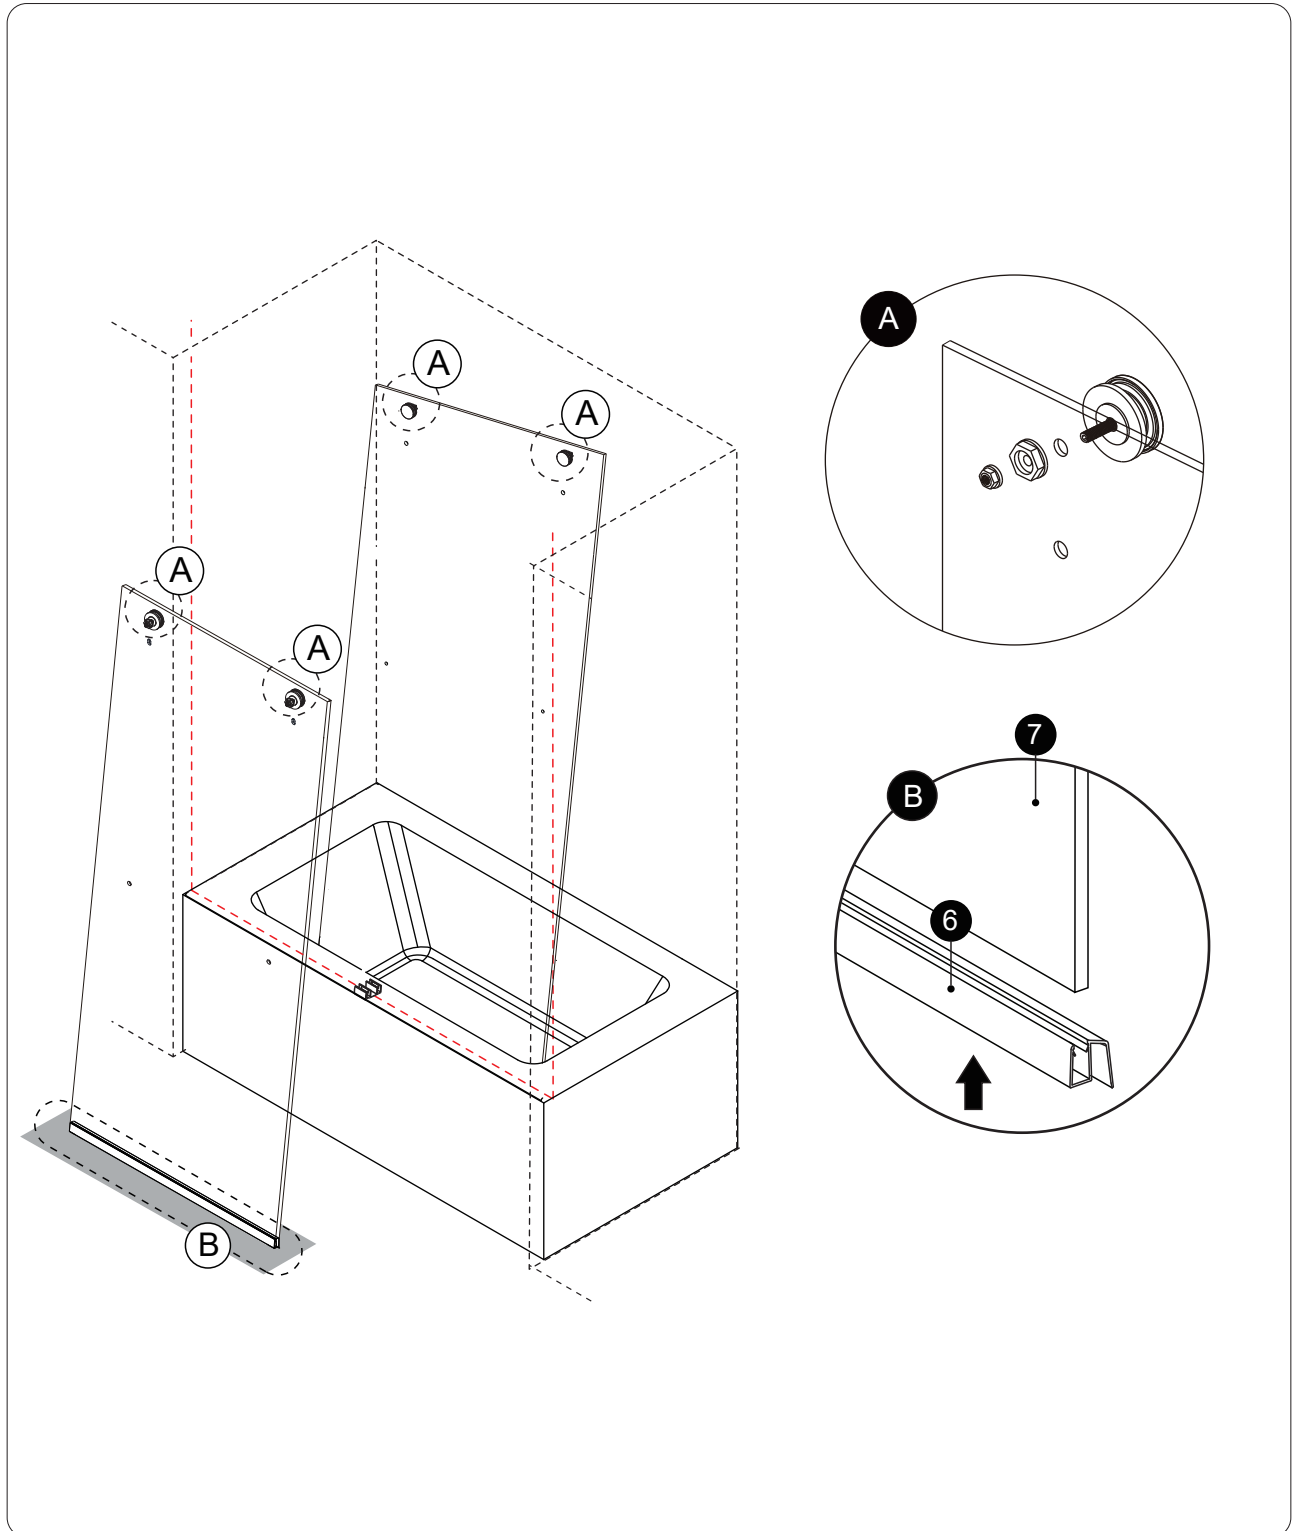





INSTALLATION GUIDE

SECORD 2.0-Tub Doors

Install Steps (Page 7)

Table


Shower Height	Wall Bracket Location (from installation curb to bottom of bracket)
H	$H1 = H - 4 \frac{3}{16}"$

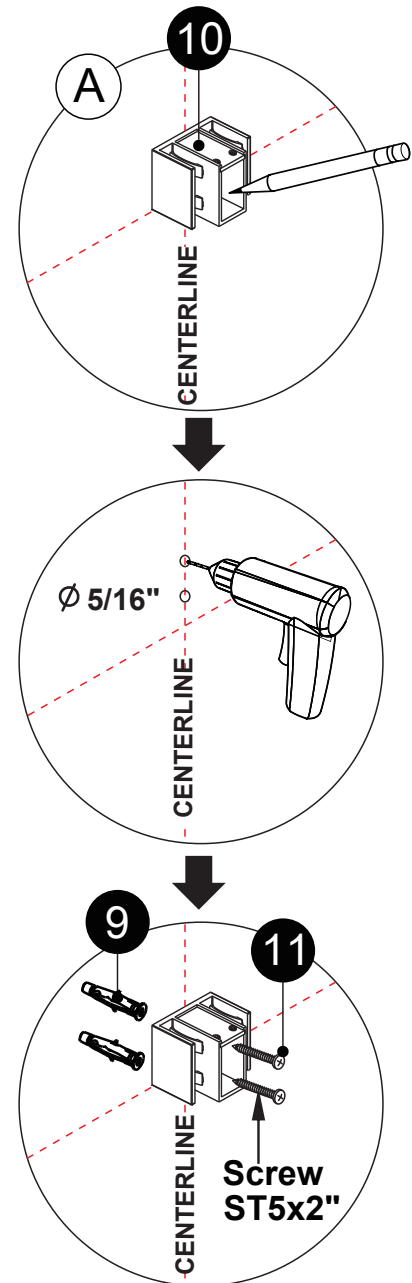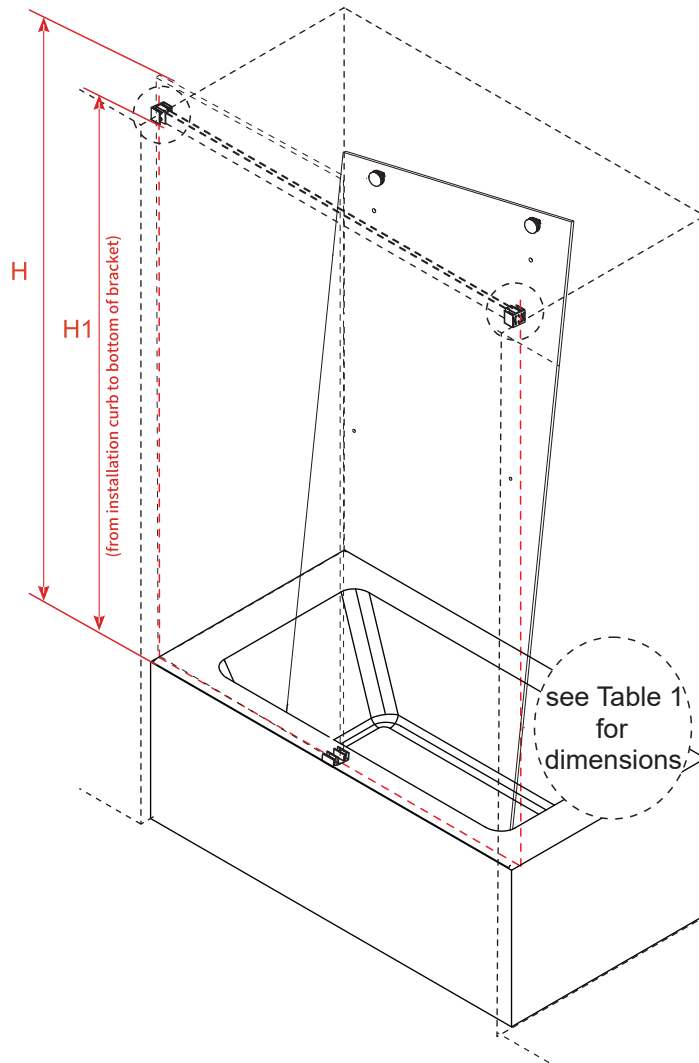

INSTALLATION GUIDE

SECORD 2.0-Tub Doors

Install Steps (Page 8)

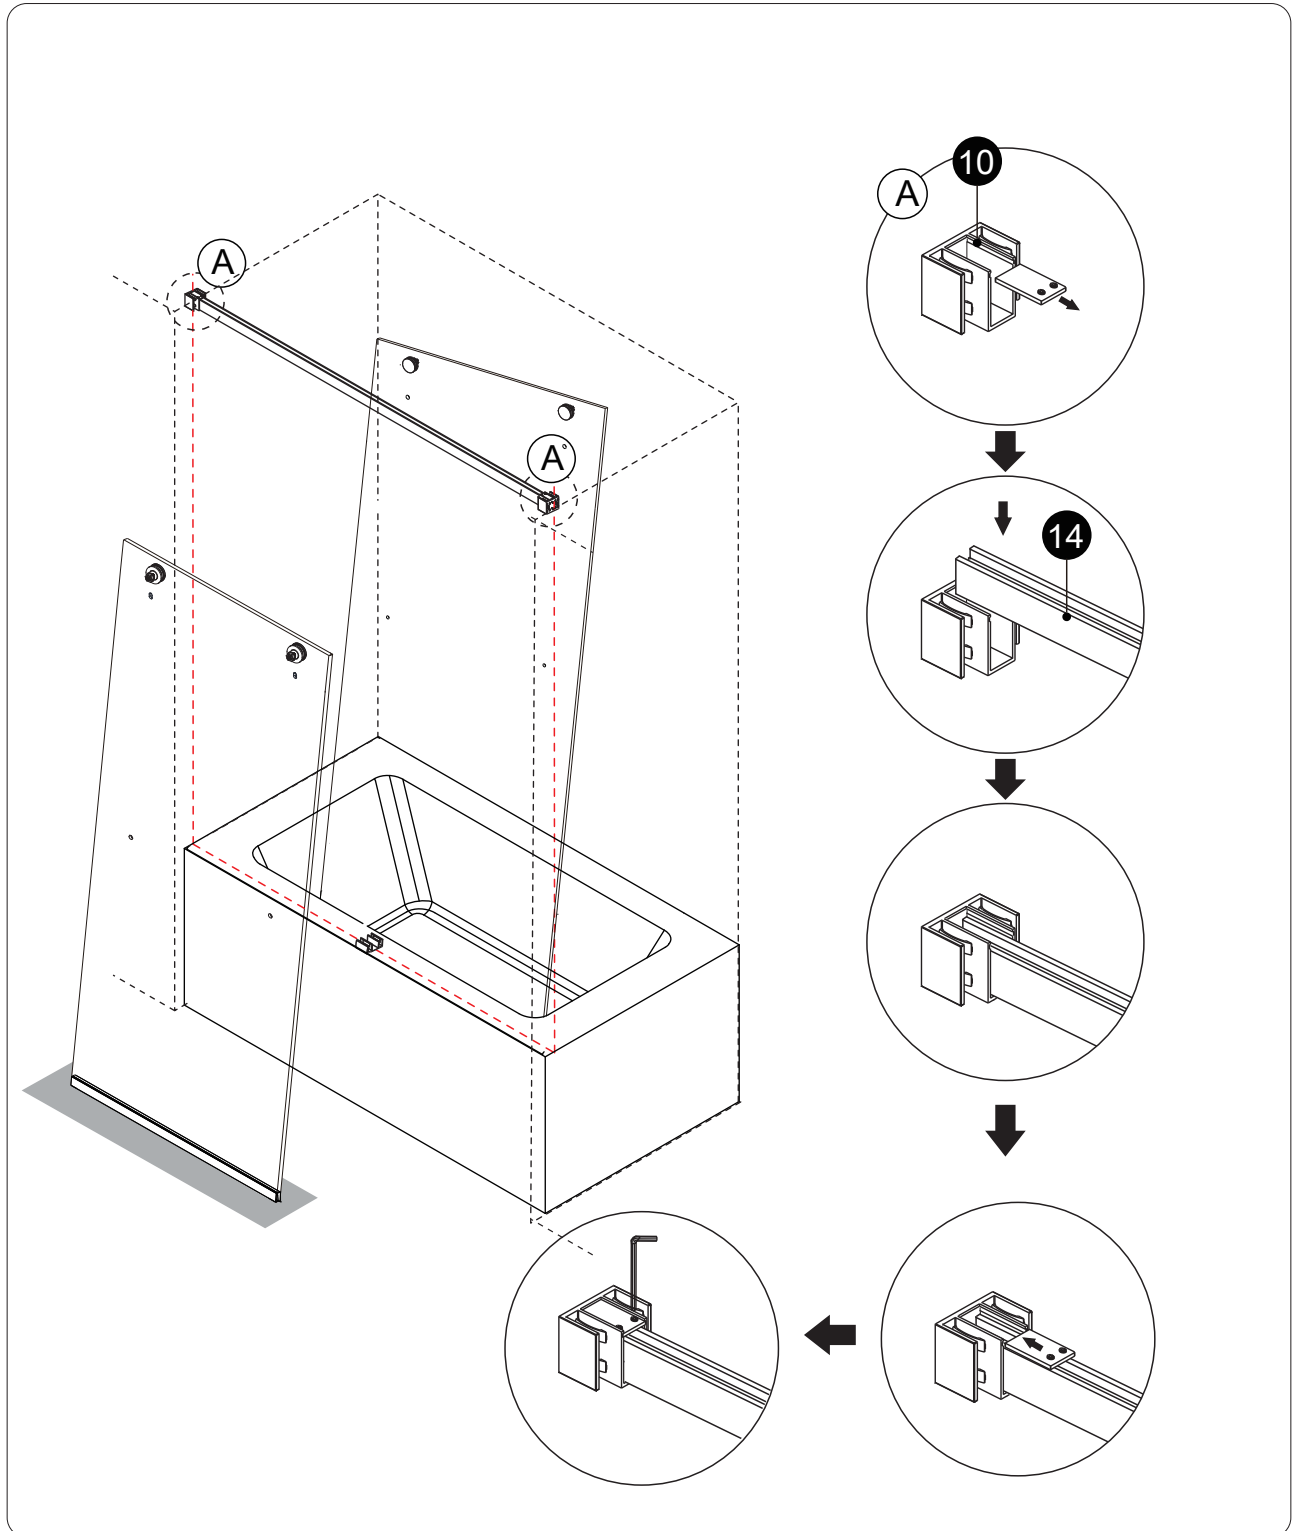




INSTALLATION GUIDE

SECORD 2.0-Tub Doors


Install Steps (Page 9)

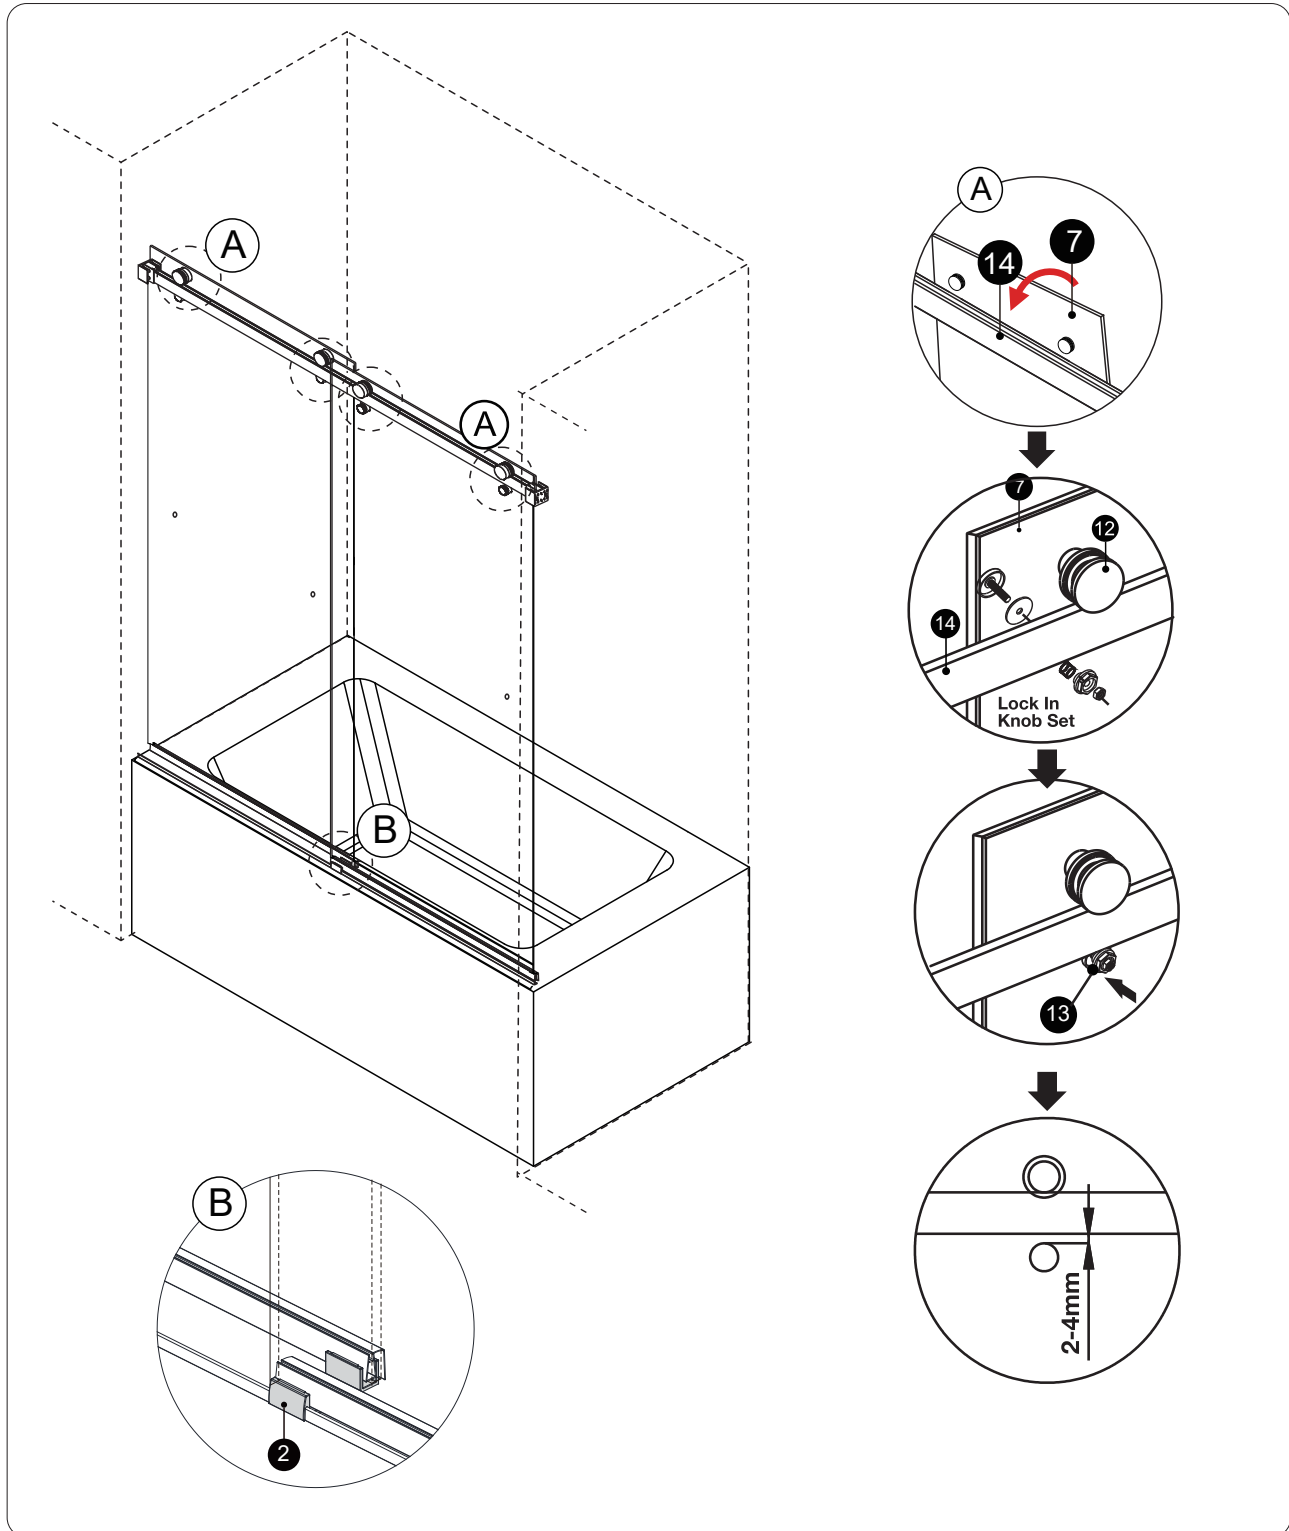

INSTALLATION GUIDE

SECORD 2.0-Tub Doors



Install Steps (Page 10)

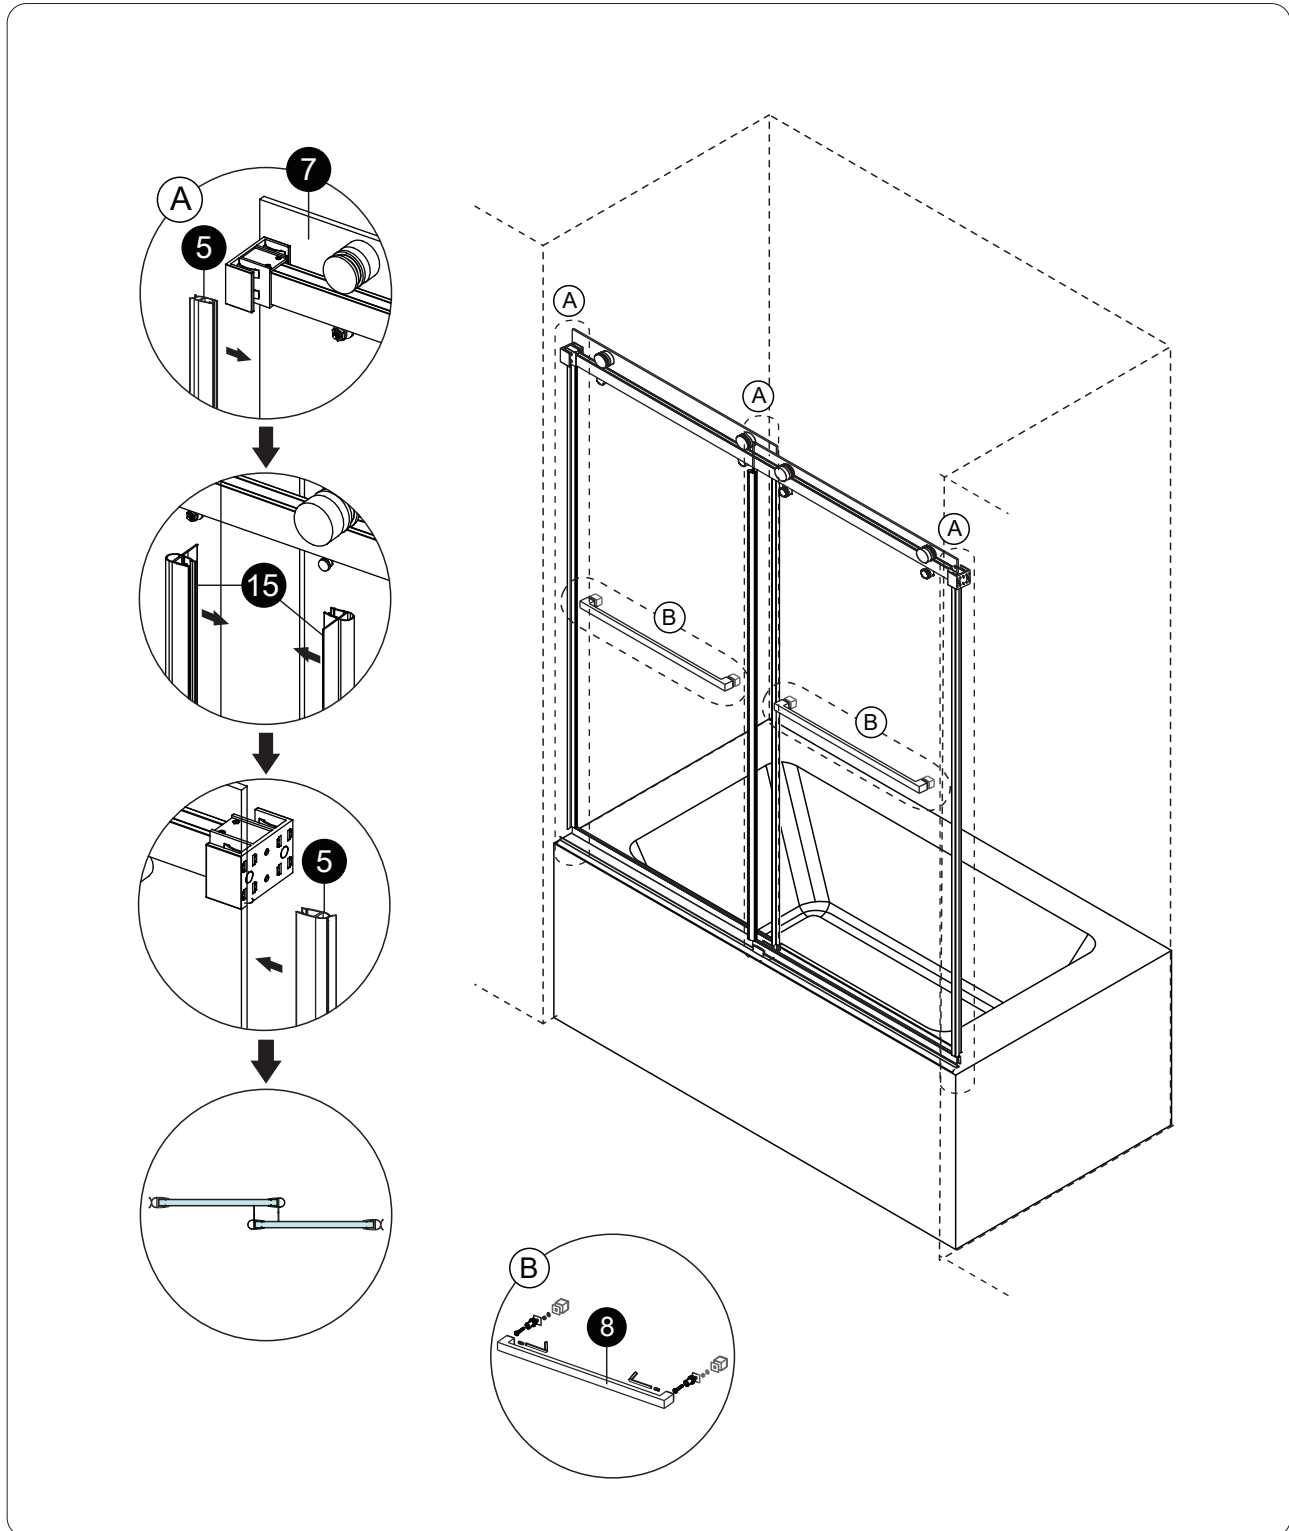




INSTALLATION GUIDE

SECORD 2.0-Tub Doors

Install Steps (Page 11)

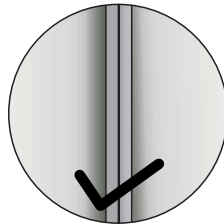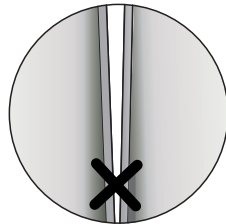


We shall not have a gap between the door panels and wall.

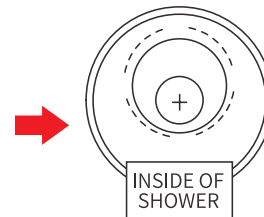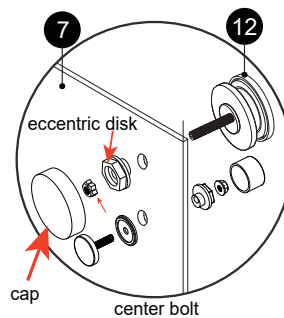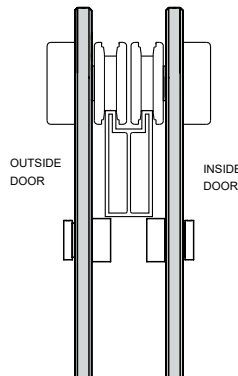


Adjust from the out side of the door where the eccentric disk is located




Tip: There is a mark on the location of the high spot eccentric disk to make adjustment easier to see.

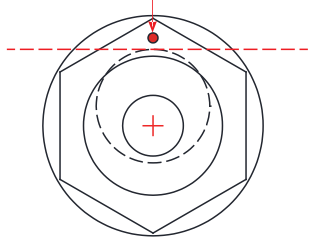



Top: High spot of disk bushing

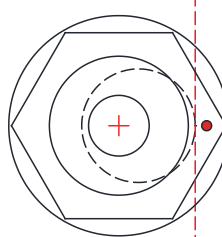

Middle: Glass level

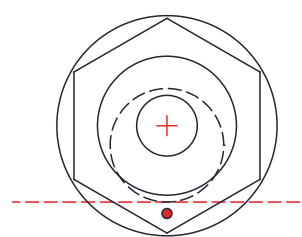

Bottom: Bottom spot of disk bushing

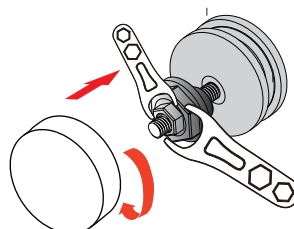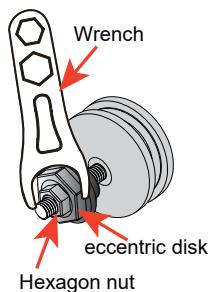

HOW TO ADJUST

- Step 1 :** Loosen hexagon nut with wrench.
- Step 2 :** Rotate eccentric disk to level glass panels.
- Step 3 :** Tighten hexagon nut.


INSTALLATION GUIDE

SECORD 2.0-Tub Doors

Install Steps (Page 12)



24 HOURS

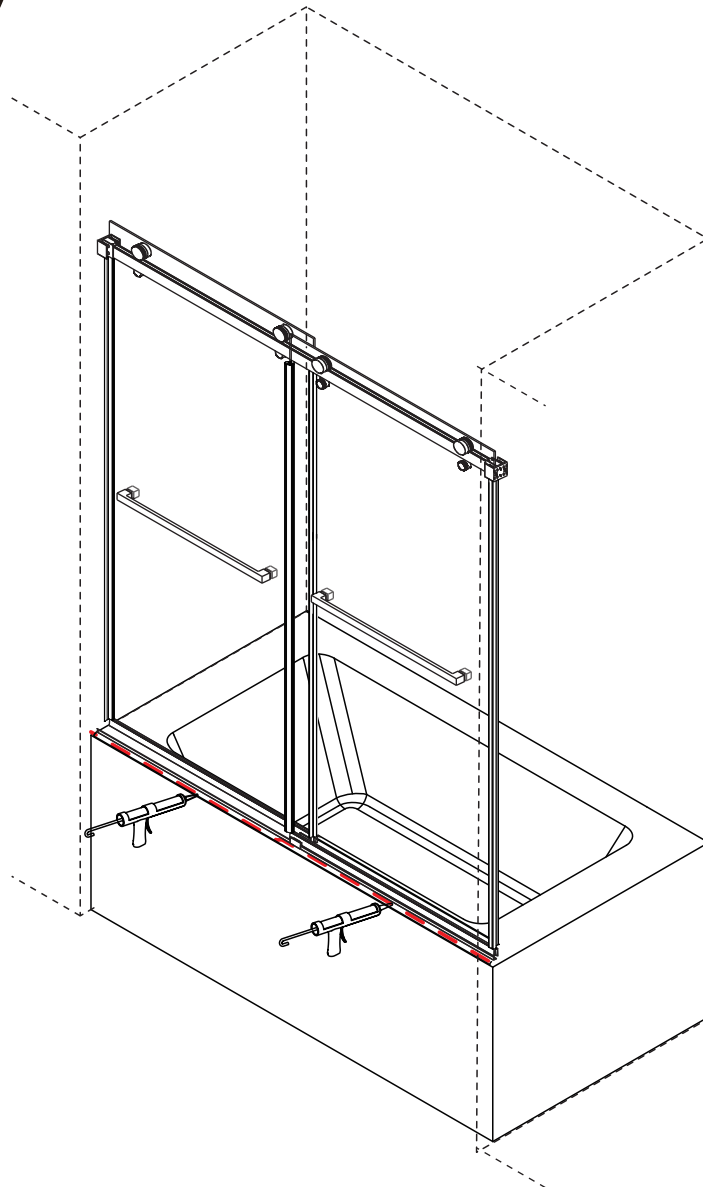

Massachusetts Code: Approved



10-Year
Warranty

teago.ca